



8.4" Light Bar (P/N - 97992)

Parts List:

Item	Spare P/N	Description	Quantity
1	N/A	Harness	1
2	77991	Switch	1
3	N/A	LED Light	1
4	N/A	Base Mount / Hardware	2
5	N/A	Hex Screw	2



Tools Required

Drill, 3/4" Drill Bit, 7/16" Drill Bit, Exacto Knife, File, 17mm Wrench/Socket, 6mm Hex Key

Installation Instructions

- Determine the mounting location of the light on the vehicle. The light can either be mounted using the internal hex screws on each end (Image A) or the extrusion (base) mounts (Image B).
- If using the extrusion mounts make sure the mounting hole is large enough for the 10mm bolt (use 7/16" drill bit to enlarge mounting hole if necessary).
- Slide the extrusion mounts onto the light as shown below, run bolt through mounting hole on vehicle and tighten. Mounting order should be: Bolt head, washer, half-moon extrusion, base mount extrusion, mounting fixture, washer, and nut.
- Determine a mounting location of the switch on the dash. Confirm that there is room behind the dash for the switch. Drill a hole in the dash with the 3/4" drill bit, using a file to enlarge the hole until the switch fits tight.
- Route wires from desired location of light under the dash to the location of the switch and then to the battery terminals.
- Connect the harness to the light.
- Connect the flat connectors to the switch in the dash.
- Connect the ring connectors to the battery or accessory power.
- Secure wires away from any moving parts or high heat areas.
- Check for operation of the light.



Image A

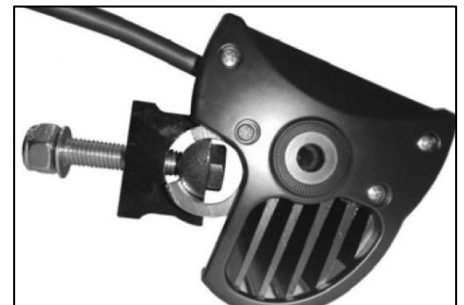


Image B



Barre d'éclairage de 8,4 po (pièce n° 97992)

Liste des pièces :

N°	Pièce de rechange n°	Désignation	Quantité
1	S.O.	Faisceau	1
2	77991	Interrupteur	1
3	S.O.	Lampe à DEL	1
4	S.O.	Support/fixations	2
5	S.O.	Vis hexagonale	2



Outils requis

Perceuse, foret de 3/4 po, foret de 7/16 po, stylet, lime, clé/douille de 17 mm et clé hexagonale de 6 mm

Instructions d'installation

- Déterminez l'emplacement de montage de la lampe sur le véhicule. Le montage de la lampe peut être réalisé en posant les vis hexagonales de chaque côté (image A) ou sur les supports (image B).
- Pour un montage avec les supports, assurez-vous que le trou de montage est assez gros pour le boulon de 10 mm (utilisez un foret de 7/16 po pour agrandir le trou de montage au besoin).
- Placez les supports sur la lampe comme le montre l'image ci-dessous, puis insérez le boulon dans le trou de montage du véhicule et serrez-le. L'ordre de montage est le suivant : tête de boulon, rondelle, demi-lune, support, fixation, rondelle et écrou.
- Déterminez l'emplacement de montage de l'interrupteur sur le tableau de bord. Assurez-vous qu'il y a assez d'espace pour l'interrupteur derrière le tableau de bord. Percez un trou dans le tableau de bord à l'aide d'un foret de 3/4 po et utilisez une lime pour agrandir le trou de sorte que l'interrupteur y soit bien ajusté.
- Acheminez les fils à partir de l'emplacement de la lampe en passant sous le tableau de bord jusqu'à l'interrupteur, puis jusqu'aux bornes de la batterie.
- Branchez le faisceau à la lampe.
- Branchez les raccords plats à l'interrupteur sur le tableau de bord.
- Branchez les cosses à anneau à la batterie ou à l'alimentation auxiliaire.
- Fixez les fils en les éloignant de toute pièce mobile ou de toute source de chaleur.
- Vérifiez le bon fonctionnement de la lampe.

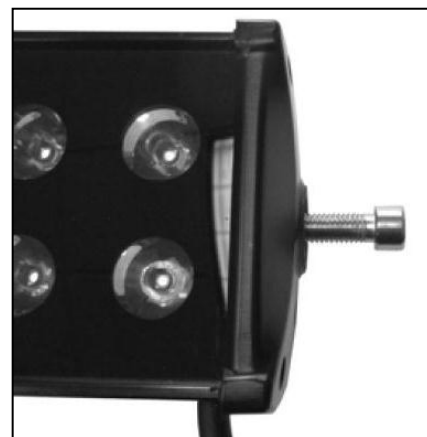


Image A

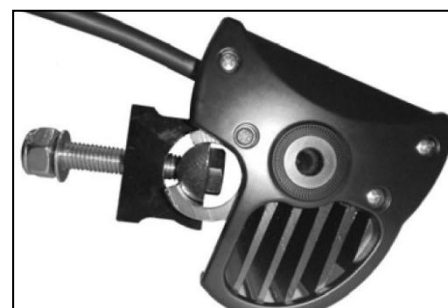


Image B